

# **OWNER'S MANUAL DC-1100A Dust Collector**



**JET**WMH Tool Group
www.wmhtoolgroup.com

P.O. BOX 1349 Auburn, WA 98071-1349 e-mail jet@wmhtoolgroup.com Phone:253-351-6000 Fax: 1-800-274-6840 **M-708639 05/02**  This manual has been prepared for the owner and operators of a JET DC-1100A. Its purpose, aside from machine operation, is to promote safety through the use of accepted correct operating and maintenance procedures. Completely read the safety and maintenance instructions before operating or servicing the machine. To obtain maximum life and efficiency from your dust collector, and to aid in using the machine safely, read this manual thoroughly and follow instructions carefully.

# **Warranty & Service**

The WMH Tool Group warrants every product it sells. If one of our tools needs service or repair, one of our Authorized Repair Stations located throughout the United States can give you quick service.

In most cases, any one of these WMH Tool Group Repair Stations can authorize warranty repair, assist you in obtaining parts, or perform routine maintenance and major repair on your JET, Performax, Wilton, or Powermatic tools.

For the name of an Authorized Repair Station in your area, please call 1-800-274-6848, or visit www.wmhtoolgroup.com

# **More Information**

Remember, the WMH Tool Group is consistently adding new products to the line. For complete, up-to-date product information, check with your local WMH Tool Group distributor, or visit www.wmhtoolgroup.com

# WMH Tool Group Warranty

The WMH Tool Group (including Performax, Wilton and Powermatic brands) makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship as follow: 1 YEAR LIMITED WARRANTY ON ALL PRODUCTS UNLESS SPECIFIED OTHERWISE. This Warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, repair or alterations outside our facilities, or to a lack of maintenance.

THE WMH TOOL GROUP LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD SPECIFIED ABOVE, FROM THE DATE THE PRODUCT WAS PURCHASED AT RETAIL. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OR MERCHANTIBILITY AND FITNESS ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG THE IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THE WMH TOOL GROUP SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

To take advantage of this warranty, the product or part must be returned for examination, postage prepaid, to an Authorized Repair Station designated by our office. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection discloses a defect, we will either repair or replace the product, or refund the purchase price if we cannot readily and quickly provide a repair or replacement, if you are willing to accept a refund. We will return repaired product or replacement at JET'S expense, but if it is determined there is no defect, or that the defect resulted from causes not within the scope of JET'S warranty, then the user must bear the cost of storing and returning the product. This warranty gives you specific legal rights; you may also have other rights which vary from state to state.

The WMH Tool Group sells through distributors only. Members of the WMH Tool Group reserve the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever.

# ↑ WARNING

- 1. Read and understand the entire contents of this manual before attempting assembly or operation. Do not use this machine until proper training and knowledge has been obtained.
- 2. Do not leave Dust Collector when plugged in. Unplug from outlet when not in use and before servicing.
- 3. Do not use outdoors or on wet surfaces.
- 4. Do not allow to be used as a toy. Close attention is necessary when used near children.
- 5. Use only as described in this manual. Use only manufacturer's recommended attachments.
- 6. Do not use with damaged cord or plug. If Dust Collector is not working as it should, has been dropped, damaged, left outdoor, or dropped in water, return it to a service center.
- 7. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run Dust Collector over cord. Keep cord away from heated surfaces.
- 8. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 9. Do not handle plug or Dust Collector with wet hands.
- 10. Do not put any objects into the openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- 11. Keep hair, loose clothing, fingers, and all parts of body away from opening and moving parts.
- 12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- 13. Do not use without dust bag and/or filters in place.
- 14. Turn off all controls before unplugging.
- 15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- 16. Do not operate without hose connected to the inlet ports or covered by an inlet cap. Hazardous moving parts inside. Unplug machine before removing inlet port, inlet cap, hose, or inlet guard.
- 17. Use the inlet caps to cover the inlet port openings that are not connected to hoses.
- 18. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:
- Lead from lead based paint
- Crystalline silica from bricks and cement and other masonry products, and
- Arsenic and chromium from chemically-treated lumber.
- 19. Your risk from those exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specifically designed to filter out microscopic particles
- 20. Do not operate tool while under the influence of drugs, alcohol or any medication.
- 21. Make sure the extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersize cord will cause a drop in the line voltage resulting in loss of power and overheating. The table below shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller gauge number, the heavier the cord.
- 22. Do not use dust collector for anything except wood dust. Materials such as liquids, metal shavings, metal dust, screws, glass, plastic or rock can cause sparks and/or damage when coming into contact with any part of the dust collector.
- 23. Ground your dust collector along all plastic componets. The connection of bare 12 gauge copper wire on all plastic hoses, fittings and blast gates to all machines will help reduce the occurrence of static build up and discharge.

#### SAVE THESE INSTRUCTIONS

# **Grounding Instructions**

Caution: This tool must be grounded while in use to protect the operator from electric shock.

In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.


Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor, with insulation having an outer surface that is green with or without yellow stripes, is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.


Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded. Use only three wire extension cords that have three-prong grounding plugs and three-pole receptacles that accept the tool's plug.

Repair or replace a damaged or worn cord immediately.

# 115 Volt Operation

As received from the factory, your dust collector is ready to run at 115 volt operation. This dust collector, when wired for 115 volts, is intended for use on a circuit that has an outlet and a plug that looks the one illustrated in Figure A. A temporary adapter, which looks like the adapter as illustrated in Figure B, may be used to connect this plug to a two-pole receptacle, as shown in Figure B if a properly grounded outlet is not available. The temporary adapter should only be used until a properly grounded outlet can be installed by a qualified electrician. **This adapter is not applicable in Canada.** The green colored rigid ear, lug, or tab, extending from the adapter, must be connected to a permanent ground such as a properly grounded outlet box, as shown in Figure B.

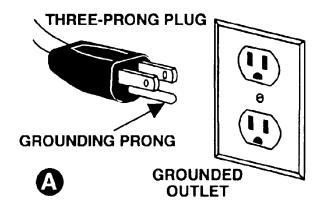

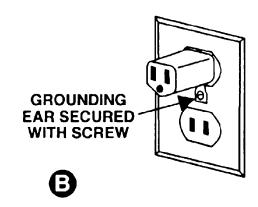



# 230 Volt Operation


If 230V, single phase operation is desired, the following instructions must be followed:


- 1. Disconnect the machine from the power source.
- 2. This dust collector is supplied with four motor leads that are connected for 115V operation, as shown in Figure A. Reconnect these four motor leads for 230V operation, as shown in Figure B.
- 3. The 115V attachment plug supplied with the dust collector must be replaced with a UL/CSA listed plug suitable for 230V operation. Contact your local Authorized JET Service Center or qualified electrician for proper procedures to install the plug. The dust collector must comply with all local and national codes after the 230V plug is installed.
- 4. The dust collector with a 230V plug should only be connected to an outlet having the same configuration. No adapter is available or should be used with the 230V plug.

Important: In all cases (115 or 230 volts), make certain the receptacle in question is properly grounded. If you are not sure, have a registered electrician check the receptacle.

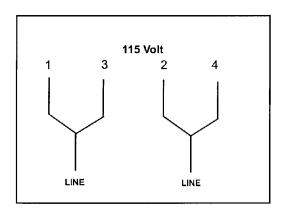

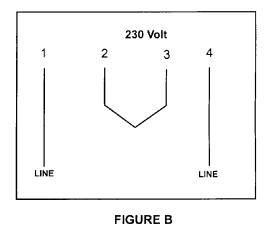

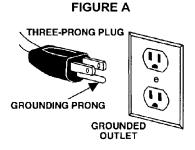


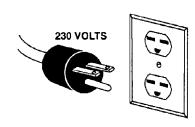

# **On-Off Switch Padlock**

# Model No. PB-1, Stock No. 709012

To safeguard your machine from unauthorized operation and to avoid accidental starting by young children, the use of a padlock is highly recommended. JET model PB-1 is available from your local authorized JET distributor or by calling JET Equipment & Tools at 800-274-6848.

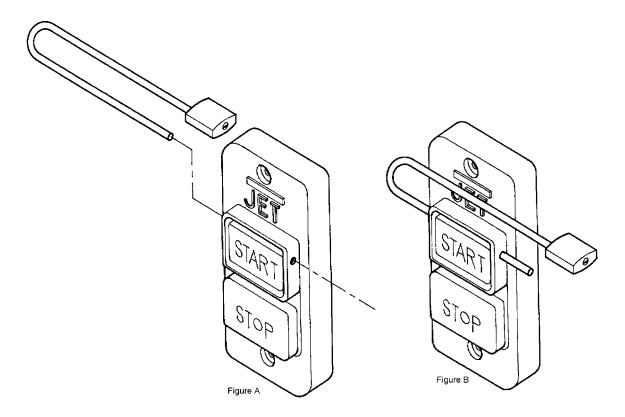

# To lock out an on-off switch:

- 1. Open the padlock. See Fig. A.
- 2. Insert through holes in the start button. See Fig. B
- 3. Close the padlock.
- 4. Place the key in a safe place.

Specifications:	DC-1100A
Stock Number	708639
Blower Wheel Diameter	11"
Sound Rating at 3 feet	70-80 db
Hose Diameter	4" & 6"
Air Flow (CFM)	
Velocity at 4" (FPM)	
Static Pressure (inch of water)	11.50
	20"
	5.6
	37"L x 28"W x 96"H
	1-1/2 HP, 1Ph 115/230V, Prewired 115V
Net Weight (approx.)	108 lbs.
Table of Contents	Page
Warranty	2
	3
	4
115V Operation	4
	5
	6
	7
	7
	8
	8
	8
	9-11
	11
	11
	12
	12
	12
	12
	12
Parts Breakdown and Parts List	13-14

The specifications in this manual are given as general information and are not binding. JET Equipment & Tools reserves the right to effect, at any time and without prior notice, changes or alterations to parts, fittings, and accessory equipment deemed necessary for any reason whatsoever.

Wiring Diagrams......15

# **⚠ WARNING**

Read and understand the entire contents of this manual before attempting assembly or operation of the dust collector! Failure to comply may cause serious injury!

# Unpacking

- 1. Finish removing all contents from the shipping carton.
- 2. Report any damage to your distributor.
- 3. Do not discard any shipping material until after the dust collector has been assembled and is running properly.

# **Contents of the Shipping Carton**

- 1 Bag Hanger
- 1 Base
- 1 Housing
- 1 Hanger Bracket
- 1 Hose
- 1 Owner's Manual
- 1 Warranty Card
- 1 Motor/Fan Assembly
- 1 Collector Bag
- 1 Filter Bag
- 2 Hose Clamps
- 1 Retainer Strap
- 4 Casters
- 1 Inlet Cover & Hose Inlet
- 3 Support Legs
- 1 Bag of Assembly Hardware
  - 16. M8 x 16 Hex Cap Bolts
  - 22. M8 Flat Washers
  - 8. M6 x 12 Pan Head Flange Bolts
  - 6. M8 Hex Nuts

# **Tools Required for Assembly**

- 2. 1/2" or 13mm Wrenches or sockets
- 1. 9/16" or 14mm Wrench or socket
- 1. #2 Cross Point Screw Driver









6) M8 Hex Nuts




16) M8 x 16 Hex Cap Bolts




8) M6 x 12 Pan Head Flange Bolts

# **Assembly**

1. Install four casters to the under side of the proper clearance.

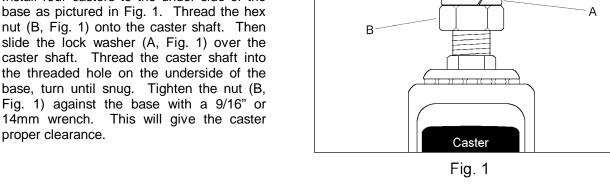

2. Place the base with casters on the ground. Attach the motor and fan assembly (A, Fig. 2) to the base using four M8 x 16 hex cap bolts, four M8 flat washers (B, Fig. 2), and a 1/2" or 13mm wrench.



# **⚠ WARNING**

The dust collector must be disconnected from the power source during assembly. Failure to comply may result in serious injury!

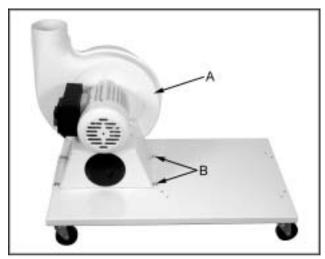


Fig. 2

3. Attach inlet guard (A, Fig. 3) to fan housing using eight M5 x 12 pan head screws (B, Fig. 3). Press the inlet ports onto the inlet guard until it snaps into place.



To reduce the risk of injury from moving parts, always keep inlet ports covered with the caps provided, if they are not connected to a flexible hose. Failure to comply may result in serious injury!

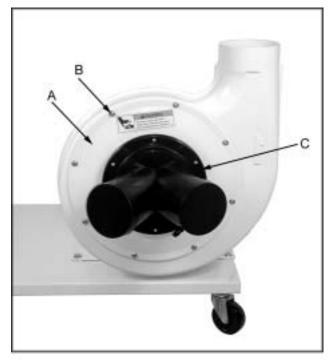


Fig. 3

4. Attach three support brackets (A, Fig. 4) to the base using six M8 x 16 hex cap bolts and six M8 flat washers (B, Fig. 4). Hand tighten only at this time.

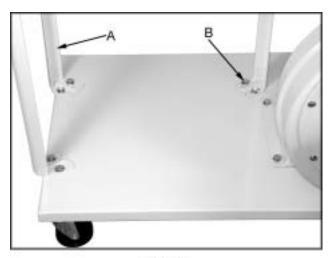


Fig. 4

5. Install the housing (A, Fig. 5) to two support brackets using four M8 x 16 hex cap bolts, eight M8 flat washers, and four M8 hex nuts (B, Fig.5). Be sure hose opening faces fan housing. Before attaching third support bracket place the hanger bracket (C, Fig.5) between the support bracket and the housing. Tighten all nuts and bolts at this time with a 1/2" or 13mm wrench.



6. Attach the hose (A, Fig. 6) between the fan housing and the collector housing with two clamps (B, Fig. 6). Tighten the clamps to secure the hose.

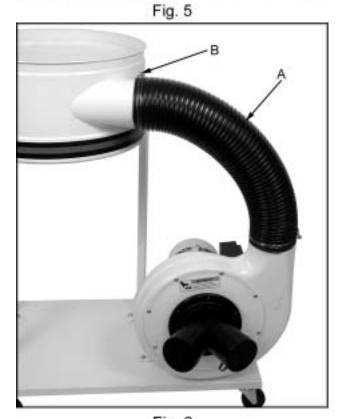


Fig. 6

- 7. Slide the bag hanger hook (A, Fig. 7) through the top loop of the filter bag. Insert the hanger into the hanger bracket. Thread the retainer strap (B, Fig. 7) through the loops on the filter bag (C, Fig.7), and fasten to the collector housing. The retainer strap should be tight enough to provide a good seal.
- 8. Insert the ring (A, Fig. 8) of the collector bag into the bottom of the housing at an angle. Pull down on the bag to make sure it "seats" in the housing.

#### **Electrical Connections**

# **⚠ WARNING**

All electrical connections must be done by a qualified electrician. All adjustments or repairs must be done with the dust collector disconnected from the power source, unplugged. Failure to comply may result in serious injury!

The DC-1100A dust collector is rated at 115/230V, Prewired 115V. Use a plug and outlet rated at least 20 amps. The circuit for the machine should also be protected by at least a 20 amp circuit breaker or fuse. Keep in mind that a curcuit being used by other machines, tools, lights, heaters, etc. at the same time will add to the electrical load. A dedicated curcuit to the dust collector will give you the best results since dust collectors are generally used at the same time other tools are running.

Before hooking up to the power source, make sure that the switch is in the off position.

# **Turning the Machine On & Off**

Before hooking up to the power source, make sure that the switch is in the off position.

The dust collector can be turned on by pressing the start button found on the motor. Press the stop button to turn off the dust collector.



Fig. 7

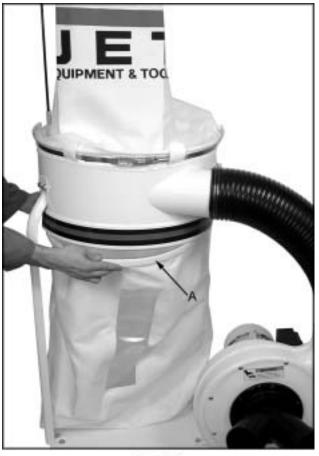


Fig. 8

#### Maintenance

# **⚠ WARNING**

Never perform maintenace on this machine before turning switch off and removing plug from power source, unplug.

Failure to comply may cause serious injury!

# **Cleaning the Filter Bag**

# **↑** CAUTION

Wearing a particle mask/respirator for protection against fine dust particles during cleaning is highly recommended.

During first use and after cleaning, the filter bag may allow some dust to escape. This is normal and will stop after a short period of time.

Clean both the filter and collector bags frequently to keep the collector's performance at its optimum. To clean:

- Disconnect the machine from the power source.
- Unhook the filter bag from the hanger and shake the bag so that the majority of the dust falls into the collector bag.
- 3. Loosen the retaining strap, and remove the filter bag from the housing.
- 4. Turn the bag inside out and clean.
- 5. Turn the bag outside in and re-attach to the housing using the retainer strap to secure.

# **Removing the Collector Bag**

- 1. Disconnect the machine from the power source, unplug.
- 2. Remove the collector bag by pushing the ring of the collector bag upwards and pulling the bag out at an angle.
- 3. Empty the contents into an appropriate container.
- 4. Turn the bag inside out and clean.

5. Turn the bag outside in and insert into the housing.

Use the proper type hose to connect the dust collector to the machine being operated. Dryer vent hose is not acceptable for this purpose. Contact your nearest JET distributor for the full line of JET Dust Collector Hoses and Accessories. Customize your installation and obtain maximum performance with JET's dust hoods, hoses, clamps, fittings, and blast gates. Accessories.

#### Motor

Make frequent inspections of the motor fan and blow out (with low pressure air hose) or vacuum any accumulation of foreign material in order to maintain normal motor ventilation.

# Connecting the Dust collector to a Machine


Use the proper type hose to connect the dust collector to the machine being operated. Dryer vent hose is not acceptable for this purpose. Contact your nearest JET distributor for the full line of JET Dust Collector Hoses and Accessories. Customize your installation and obtain maximum performance with JET's dust hoods, hoses, clamps, fittings, and blast gates.

You can also purchase the JET "Dust Collection Basics Video" stock # JW1050V through your JET Distributor

#### **Grounding the Dust Collection System**

The dust collection system includes the dust collector and the hose, or duct work you use to connect the tools. The dust collector is grounded though the ground wire in the cord. The hose or duct work you use to connect the tool to the dust collector must also be grounded. To assist in grounding your system you can purchase the JET "Dust Collector Grounding Kit" stock # JW1053, and also the JET "Dust Collection Basics Video" stock # JW1050V through JET Distributors.

# Parts Breakdown

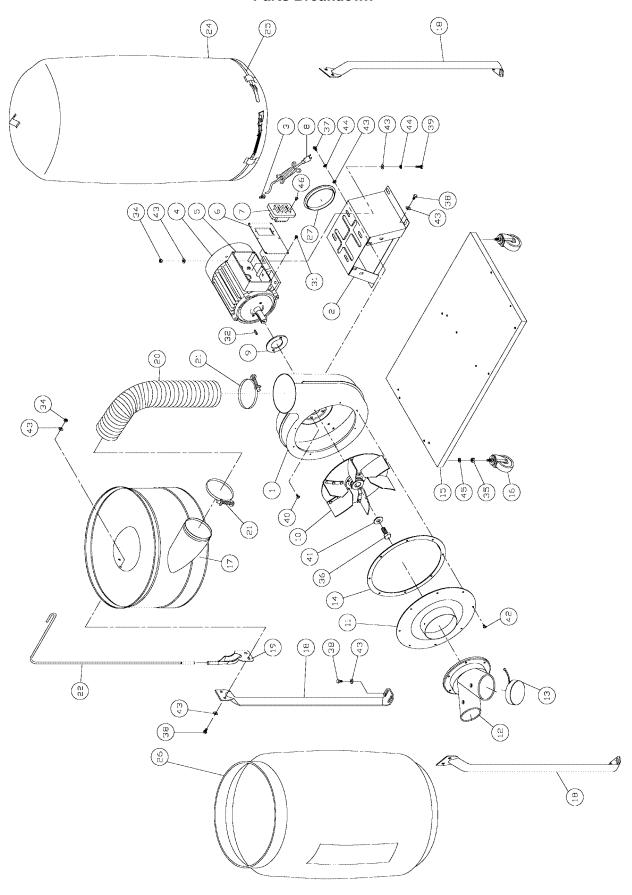

# Parts List for the DC-1100A

1	Index No.	Part No.	Description	Size	Qty.
2       411026W       Motor Bracket	4	44402EW	•		-
3. 998621 Strain Relief 1 4. MA2041J1W Motor Fan Cover (not shown) 1-1/2 HP, 1Ph 1 4. MA2041J1W Motor Fan Cover (not shown) 1-1/2 HP, 1Ph 1 5. DC1100-50W Motor Fan Cover (not shown) 1 6. CA003030 Running Capacitor (not shown) 30MFD, 300V 1 7. CA020010 Starting Capacitor (not shown) 200MFD, 125V 1 7. DC1100-52 Centrifugal Switch (not shown) 1 7. DC1100-53 Centrifugal Switch Rotor (not shown) 1 7. Switch Box 1 7. 994542 Switch Box 1 7. 994542 Switch Pate 1 7. 994542 Switch 1 8. 999910 Power Cord 1 9. 420051 Motor Packing 1 10. AB41040 Impeller 11" 1 11. 411036W Inlet Guard 1 12. 427028 Inlet Cap 1 14. 430034 Inlet Cap 1 15. 411041W Base 1 16. 402036. Pivoting Caster 4 17. 420012W Housing 1 18. 402004W Support 3 19. 523011W Hange Bracket 1 11. 420010. Ring Clarby Hange Bracket 1 12. 420010. Ring Clarby 1 19. 430038 Hanger 1 20. 41109 Hose 5 11. 420010. Ring Clarby 1 21. 420010. Ring Clarby 1 22. 430038 Hanger 2 23. 430038 Hanger 3 24008. Filter Bag 5 Micron 1 24. 708698 Filter Bag 5 Micron 1 25. AB410012 Retainer Strap 1 26. 708699A Collection Bag 5 27. 450038 Bracket Cap 1 28. TS-1540061 Nut M8 10 29. TS-1540061 Nut M8 10 30. TS-1490031 Hex Head Bolt M8x20 1 31. TS-1540061 Nut M8x20 1 32. KS050525 Key Sx5x25 1 34. TS-1540061 Nut M8x20 1 35. TS-0560031 Flat Washer M8 1 36. TS-1490031 Hex Head Bolt M8x20 1 37. TS-1490031 Hex Head Bolt M8x20 1 38. TS-1490031 Flat Washer M8 1 39. DC1200-54 Drietion Label (not shown) 1 40. DC1100-HP Hardware Package (not shown) 1 41. DC1100-HP Hardware Package (not shown) 1 42. DC1200-54 Drietion Label (not shown) 1 43. DC1100-HP Hardware Package (not shown) 1 44. DC1100-HP Hardware Package (not shown) 1 45. DC1100-HP Hardware Package (not shown) 1			,		
MA2041JIW					
DC1100-50W   Motor Fan Cover (not shown)					
DC1100-51   Motor Fan (not shown)   30MFD, 300V   1					
CA003030 Running Capacitor (not shown) 30MFD, 300V. 1 CA020010 Starting Capacitor (not shown) 200MFD, 125V. 1 DC1100-52 Centrifugal Switch (not shown)					
CA020010 Starting Capacitor (not shown) 200MFD, 125V 1 DC1100-53 Centrifugal Switch (not shown) 1 DC1100-53 Centrifugal Switch Rotor (not shown) 1 5 411051 Switch Box 1 7 994542 Switch 1 1 8 999910 Power Cord. 1 9 420051 Motor Packing 11" 11" 1 10 AB411040 Impeller 111" 1 1 11 411036W Inlet Guard 1 12 427028 Inlet Cap 1 14 430034 Inlet Flange Packing 1 15 411041W Base 1 1 16 402036 Pivoting Caster 4 4 402004W Support. 3 18 402004W Support. 3 19 523011W Housing 1 18 402004W Support. 3 19 523011W Hose 11 12 42000 Ring Clamp 5" 22 14 430038 Hanger 15" 22 14 430038 Hanger Bracket 1 20 411009 Hose 11 14 24008 Lower Extension Rod (used w/5 micron) 1 24 708698 Filter Bag. 30 Micron 1 708706 Filter Bag. 5 Micron 1 25 AB410012 Retainer Strap 1 26 708699A Collection Bag 15 T-540001 Hex Head Bolt M8x12 4 38 T-5-1490031 Hex Head Bolt M8x12 4 39 T-5-1490031 Hex Head Bolt M8x12 4 30 T-5-1490031 Hex Head Bolt M8x12 4 30 T-5-1490031 Hex Head Bolt M8x12 4 30 T-5-1490031 Hex Head Bolt M8x12 4 31 T-5-1654041 Pan Head Bolt W/Flange M8x25 4 31 T-5-1654041 Pan Head Bolt W/Flange M8x12 4 31 T-5-1654041 Pan Head Bolt W/Flange M8x12 4 31 T-5-1654041 Pan Head Bolt W/Flange M8x12 4 32 T-5-1554041 Pan Head Bolt W/Flange M6x12 2 33 T-5-1650031 Flat Washer M8 34 45 T-5-1554041 Pan Head Bolt W/Flange M6x12 2 46 T-5-1654041 Pan Head Bolt W/Flange M6x12 2 47 T-5-1654041 Pan Head Bolt W/Flange M6x12 2 48 T-5-1654041 Pan Head Bolt W/Flange M6x12 4 49 T-5-1654041 Pan Head Bolt W/Flange M6x12 2 41 T-5-16540041 Pan Head Bolt W/Flange M6x12 4 41 T-5-16540041 Pan Head Bolt W/Flange M6x12 4 41 T-5-16540041 Pan Head Bolt W/Flange M6x12 4 42 T-5-16540041 Pan Head Bolt W/Flange M6x12 5 43 T-5-16540041 Pan Head Bolt W/Flange M6x12 5 44 T-5-16540041 Pan Head Bolt W/Flange M6x12 5 45 DC1200-54 Direction Label (not shown) 1 46 DC1200-54 Direction Label (not shown) 1 47 DC1200-54 Direction Label (not shown) 1 48 DC1200-54 Direction Label (not shown) 1					
DC1100-52		CA003030	Running Capacitor (not snown)	.30MFD, 300V	1
DC1100-53 Centrifugal Switch Rotor (not shown) 1 5 411051 Switch Box 1 6 411053 Switch Plate					
5. 411051 Switch Box 1 6. 411053 Switch Plate		DC1100-52	Centrifugal Switch (not shown)		1
6					
7. 994542 Switch. 1 8. 999910 Power Cord. 1 9. 420051 Motor Packing. 1 10. AB411040 Impeller 111" 1 11. 411036W Inlet Guard 1 12. 427028 Inlet Port. 2 @ 4" 1 13. 420203 Inlet Cap. 1 14. 430034 Inlet Flange Packing. 1 15. 411041W Base 1 16. 402036 Pivoting Caster 4 17. 420012W Housing 1 18. 402004W Support. 3 19. 523011W Hanger Bracket 1 20. 411009 Hose 1 21. 420010 Ring Clamp 5" 2 24. 430038 Hanger 1 25. 420010 Ring Clamp 5" 2 24. 430038 Hanger 1 25. 424008 Lower Extension Rod (used w/5 micron) 1 24. 708698 Filter Bag 5 Micron 1 25. AB410012 Retainer Strap 1 26. 708699A Collection Bag 1 27. 450038 Bracket Cap. 1 28. KS050525 Key 5x5x25 1 34. TS-1540061 Nut Mut 3/8"-16UNC 4 36. TS-1490031 Hex Head Bolt M8x10 M8x10 1 37. TS-1490031 Hex Head Bolt M8x20 1 38. TS-1490031 Hex Head Bolt M8x10 M8x12 4 40. TS-1554041 Pan Head Bolt M8x12 4 40. TS-1554041 Pan Head Bolt M8x12 4 41. TS-1680031 Flat Washer M8 1 42. TS-1554041 Pan Head Bolt M8x12 4 43. TS-1554041 Pan Head Bolt M8x12 4 44. TS-1554041 Pan Head Bolt M8x12 4 45. TS-1554041 Pan Head Bolt M8x12 4 45. TS-1554041 Pan Head Bolt M8x12 4 46. ST059200 Tapping Screw M6x12 2 47. Tapping Screw M8 1 48. TS-1554041 Pan Head Bolt M8x16 M8x12 4 49. TS-1554041 Pan Head Bolt M7Flange M6x12 2 48. TS-1554041 Pan Head Bolt M7Flange M6x12 8 48. TS-1550031 Flat Washer M8 1 49. TS-1554041 Pan Head Bolt M7Flange M6x12 8 49. TS-1554041 Pan Head Bolt M7Flange M6x12 8 40. TS-1554041 Pan Head Bolt M7Flange M6x12 8 41. TS-1680031 Flat Washer M8 34 42. TS-1554041 Pan Head Bolt W7Flange M6x12 8 43. TS-155001 Spring Washer M8 34 44. TS-1554041 Pan Head Bolt W7Flange M6x12 8 45. TS-1551071 Spring Washer M8 34 46. ST059200 Tapping Screw M5x8 2 DC1200-53 Grounding Label (not shown) 1 DC1100-HD Hardware Package (not shown) 1					
8         .999910.         Power Cord.         1           9         .420051         Motor Packing.         1           10         AB411040         Impeller         11"         1           11         .411036W         Inlet Guard         1         1           12         .427028         Inlet Port.         2 @ 4"         1           13         .420203         Inlet Cap.         1           14         .430034         Inlet Flange Packing.         1           15         .411041W         Base         1           16         .402036         Pivoting Caster         4           17         .420012W         Housing         1           18         .402004W         Support         3           19         .523011W         Hanger Bracket         1           20         .411009         Hose         1           21         .420010         Ring Clamp         5"         2           24         .430038         Hanger         1           24         .708698         Filter Bag         30 Micron         1           .708706         Filiter Bag         30 Micron         1           25					
9.					
10					
11       .411036W       Inlet Qard       1         12       .427028       Inlet Port       .2 @ 4"       1         13       .420203       Inlet Cap       .1         14       .430034       Inlet Flange Packing       .1         15       .411041W       Base       .1         16       .402036       Pivoting Caster       .4         17       .420012W       Housing       .1         18       .402004W       Support       .3         19       .523011W       Hanger Bracket       .1         20       .411009       Hose       .1         21       .420010       Ring Clamp       .5"       .2         22       .430038       Hanger       .1         .424008       Lower Extension Rod (used w/5 micron)       .1         .24       .708698       Filter Bag       .30 Micron       .1         .708706       Filter Bag       .5 Micron       .1         .26       .708699A       Collection Bag       .1         .27       .450038       Bracket Cap       .1         .31       .ST050204       Tapping Screw       .M5x10       .6         .32       .KS0	9	420051	Motor Packing		1
12	10	AB411040	Impeller	.11"	1
13       .420203       Inlet Cap       1         14       .430034       Inlet Flange Packing       1         15       .411041W       Base       1         16       .402036       Pivoting Caster       4         17       .420012W       Housing       1         18       .402004W       Support       3         19       .523011W       Hanger Bracket       1         20       .411009       Hose       1         21       .420010       Ring Clamp       5"       2         24       .430038       Hanger       1         24       .708698       Filter Bag       30 Micron       1         25       .AB410012       Retainer Strap       5 Micron         25       .AB410012       Retainer Strap       1         26       .708699A       Collection Bag       1         27       .450038       Bracket Cap       1         31       .ST050204       Tapping Screw       M5x10       6         32       .KS050525       Key       .5x5x25       1         34       .TS-1490061       Nut       .M8x20       1         35       .TS-14900011	11	411036W	Inlet Guard		1
14       .430034       Inlet Flange Packing       1         15       .411041W       Base       .1         16       .402036       Pivoting Caster       .4         17       .420012W       Housing       .1         18       .402004W       Support       .3         19       .523011W       Hanger Bracket       .1         20       .411009       Hose       .1         21       .420010       Ring Clamp       .5"       .2         22       .430038       Hanger       .1       .1         24       .708698       Filter Bag       .30 Micron       .1         .708706       Filter Bag       .5 Micron          .25       .A8410012       Retainer Strap           .26       .708699A       Collection Bag           .27       .450038       Bracket Cap           .31       .ST050204       Tapping Screw            .22       .K8050525       Key             .31       .ST05061031       Nut	12	427028	Inlet Port	.2 @ 4"	1
14       .430034       Inlet Flange Packing       1         15       .411041W       Base       .1         16       .402036       Pivoting Caster       .4         17       .420012W       Housing       .1         18       .402004W       Support       .3         19       .523011W       Hanger Bracket       .1         20       .411009       Hose       .1         21       .420010       Ring Clamp       .5"       .2         22       .430038       Hanger       .1       .1         24       .708698       Filter Bag       .30 Micron       .1         .708706       Filter Bag       .5 Micron          .25       .A8410012       Retainer Strap           .26       .708699A       Collection Bag           .27       .450038       Bracket Cap           .31       .ST050204       Tapping Screw            .22       .K8050525       Key             .31       .ST05061031       Nut	13	420203	Inlet Cap		1
15         411041W         Base         1           16         402036         Pivoting Caster         4           17         420012W         Housing         1           18         402004W         Support         3           19         523011W         Hanger Bracket         1           20         411009         Hose         1           21         42010         Ring Clamp         5"         2           22         430038         Hanger         1           424008         Lower Extension Rod (used w/5 micron)         1           24         708698         Filter Bag         30 Micron         1           708706         Filter Bag         5 Micron         5           25         AB410012         Retainer Strap         1           26         708699A         Collection Bag         1           27         450038         Bracket Cap         1           31         ST050204         Tapping Screw         M5x10         6           32         KS050525         Key         5x5x25         1           34         TS-1540061         Nut         M8         10           35         TS-561					
16       .402036       Pivoting Caster       4         17       .420012W       Housing       1         18       .402004W       Support       3         19       .523011W       Hanger Bracket       1         20       .411009       Hose       1         21       .420010       Ring Clamp       5"       2         24       .430038       Hanger       1         .424008       Lower Extension Rod (used w/5 micron)       1         .24       .708698       Filter Bag.       30 Micron       1         .708706       Filter Bag.       5 Micron       2         .5       AB410012       Retainer Strap       1         .6       .708699A       Collection Bag       1         .27       .450038       Bracket Cap       1         .31       ST050204       Tapping Screw.       M5x10       6         .32       KS050525       Key       5x5x25       1         .4       T3-1490061       Nut       M8       10         .35       T5-0561031       Nut       M8       10         .37       T5-1490011       Hex Head Bolt       M8x20       1					
17       420012W       Housing       1         18       402004W       Support       3         19       523011W       Hanger Bracket       1         20       411009       Hose       1         21       420010       Ring Clamp       5"       2         22       430038       Hanger       1         424008       Lower Extension Rod (used w/5 micron)       1         24       708698       Filter Bag       30 Micron       1         708706       Filter Bag       5 Micron       1         25       AB410012       Retainer Strap       1         26       708699A       Collection Bag       1         27       450038       Bracket Cap       1         31       ST050204       Tapping Screw       M5x10       6         32       KS050525       Key       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       3/8"-16UNC       4         46       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x10       16 <td></td> <td></td> <td></td> <td></td> <td></td>					
18       402004W       Support       3         19       5230111W       Hanger Bracket       1         20       411009       Hose       1         21       420010       Ring Clamp       5"       2         22       430038       Hanger       1         424008       Lower Extension Rod (used w/5 micron)       1         24       708698       Filter Bag       30 Micron         25       AB410012       Retainer Strap       1         26       708699A       Collection Bag       1         27       450038       Bracket Cap       1         31       ST050204       Tapping Screw       M5x10       6         32       KS050525       Key       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       M8x20       1         36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490041       Hex Head Bolt       M8x10       16         39       TS-1490041       Hex Head Bolt       M8x16       16         39       TS-1554041       Pan Head Bolt W/Flange					
19       523011W       Hanger Bracket.       1         20       411009       Hose       1         21       420010       Ring Clamp       5"       2         24       430038       Hanger       1					
20       411009       Hose       1         21       420010       Ring Clamp       5"       2         22       430038       Hanger       1         424008       Lower Extension Rod (used w/5 micron)       1         24       708698       Filter Bag       30 Micron       1         708706       Filter Bag       5 Micron         25       AB410012       Retainer Strap       1         26       708699A       Collection Bag       1         27       450038       Bracket Cap       1         31       ST050204       Tapping Screw       M5x10       6         32       KS050525       Key       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       M8x20       1         37       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       P	10	522011\\\\	Hanger Bracket		1
21       .420010       Ring Clamp       .5"       .2         22       .430038       Hanger       .1					
22       .430038       Hanger       .1					
24       708698       Filter Bag       30 Micron       1         708706       Filter Bag       5 Micron         25       AB410012       Retainer Strap       1         26       708699A       Collection Bag       1         27       450038       Bracket Cap       1         31       ST050204       Tapping Screw       M5x10       6         32       KS050525       Key       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       3/8"-16UNC       4         36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer					
708706         Filter Bag         5 Micron           25         AB410012         Retainer Strap         1           26         708699A         Collection Bag         1           27         450038         Bracket Cap         1           31         ST050204         Tapping Screw         M5x10         6           32         KS050525         Key         5x5x25         1           34         TS-1540061         Nut         M8         10           35         TS-0561031         Nut         3/8"-16UNC         4           36         TS-1490031         Hex Head Bolt         M8x20         1           37         TS-1490011         Hex Head Bolt         M8x12         4           38         TS-1490021         Hex Head Bolt         M8x16         16           39         TS-1490041         Hex Head Bolt         M8x25         4           40         TS-1554041         Pan Head Bolt W/Flange         M6x12         2           41         TS-0680031         Flat Washer         M8         1           42         TS-1554041         Pan Head Bolt W/Flange         M6x12         8           43         TS-0680031         Flat Washer<					
25.       AB410012       Retainer Strap       1         26.       708699A       Collection Bag       1         27.       450038       Bracket Cap.       1         31.       ST050204       Tapping Screw       M5x10       6         32.       KS050525       Key.       5x5x25       1         34.       TS-1540061       Nut       M8       10         35.       TS-0561031       Nut       3/8"-16UNC       4         36.       TS-1490031       Hex Head Bolt       M8x20       1         37.       TS-1490011       Hex Head Bolt       M8x12       4         38.       TS-1490021       Hex Head Bolt       M8x16       16         39.       TS-1490041       Hex Head Bolt       M8x25       4         40.       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41.       TS-0680031       Flat Washer       M8       1         42.       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43.       TS-0680031       Flat Washer       M8       34         44.       TS-0720081       Spring Washer       M8       8         45.					
26       708699A       Collection Bag       1         27       450038       Bracket Cap       1         31       ST050204       Tapping Screw       M5x10       6         32       KS050525       Key       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       3/8"-16UNC       4         36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       34         45       TS-1551071       Spring Washer       M8       8         46					
27       450038       Bracket Cap       1         31       ST050204       Tapping Screw       M5x10       6         32       KS050525       Key       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       3/8"-16UNC       4         36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       3         44       TS-0720081       Spring Washer       M8       34         44       TS-0720081       Spring Washer       M10       4         45       TS-1551071       Spring Washer       M10       4					
31       ST050204       Tapping Screw.       M5x10.       6         32       KS050525       Key.       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       3/8"-16UNC       4         36       TS-1490031       Hex Head Bolt       M8x20.       1         37       TS-1490011       Hex Head Bolt       M8x12.       4         38       TS-1490021       Hex Head Bolt       M8x16.       16         39       TS-1490041       Hex Head Bolt W/Flange       M6x12.       2         40       TS-1554041       Pan Head Bolt W/Flange       M6x12.       2         41       TS-0680031       Flat Washer.       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12.       8         43       TS-0680031       Flat Washer.       M8       34         44       TS-0720081       Spring Washer.       M8       34         45       TS-1551071       Spring Washer.       M10       4         46       ST059200       Tapping Screw.       M5x8       2         DC1200-53       Grounding Label (not shown)       1					
32       KS050525       Key       5x5x25       1         34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       3/8"-16UNC       4         36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       34         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100-HP <td></td> <td></td> <td></td> <td></td> <td></td>					
34       TS-1540061       Nut       M8       10         35       TS-0561031       Nut       3/8"-16UNC       4         36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       34         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardwa	31	ST050204	Tapping Screw	.M5x10	6
35       TS-0561031       Nut       3/8"-16UNC       4         36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       34         44       TS-0759200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1	32	KS050525	Key	.5x5x25	1
36       TS-1490031       Hex Head Bolt       M8x20       1         37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       34         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1	34	TS-1540061	Nut	.M8	10
37       TS-1490011       Hex Head Bolt       M8x12       4         38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       34         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tappping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1	35	TS-0561031	Nut	.3/8"-16UNC	4
38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1	36	TS-1490031	Hex Head Bolt	.M8x20	1
38       TS-1490021       Hex Head Bolt       M8x16       16         39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1	37	TS-1490011	Hex Head Bolt	.M8x12	4
39       TS-1490041       Hex Head Bolt       M8x25       4         40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1					
40       TS-1554041       Pan Head Bolt W/Flange       M6x12       2         41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1					
41       TS-0680031       Flat Washer       M8       1         42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1					
42       TS-1554041       Pan Head Bolt W/Flange       M6x12       8         43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1			· · · · · · · · · · · · · · · · · · ·		
43       TS-0680031       Flat Washer       M8       34         44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1					
44       TS-0720081       Spring Washer       M8       8         45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1					
45       TS-1551071       Spring Washer       M10       4         46       ST059200       Tapping Screw       M5x8       2         DC1200-53       Grounding Label (not shown)       1         DC1200-54       Direction Label (not shown)       1         DC1100A-ID       I.D. Label (not shown)       1         DC1100-HP       Hardware Package (not shown)       1					
46       ST059200       Tapping Screw       M5x8       2        DC1200-53       Grounding Label (not shown)       1        DC1200-54       Direction Label (not shown)       1        DC1100A-ID       I.D. Label (not shown)       1        DC1100-HP       Hardware Package (not shown)       1					
DC1200-53					
DC1200-54					
DC1100A-IDI.D. Label (not shown)					
DC1100-HP Hardware Package (not shown)					
DC1100-WL					
		DC1100-WL	Warning Label (not shown)		1

# **Wiring Diagram**

